

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Ancoats North A,B,C Busbars	Y	H	L	6.6	Bradford	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Bradford BC Bus Section CB, F106 & F2 CB'S		Y	H	L
					Cannon St	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Cannon St BC Bus Section CB &/OR F845 CB and BC Bus Section CB's as appropriate.		Y	H	L
					Eastlands	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Eastlands F3615 or F3616 CB & AB Bus Section CB.		Y	-	L
					Queens Park	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Queens Park AB Bus Section CB		Y	H	L
					Strangeways	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Open Strangeways AB Bus Section CB & F762 OR F1848 CB		Y	-	L
					Stuart St	Open Ancoats North F4340 (CIS Tower) CB & AB Bus Section CB. Open Stuart St AB Bus Section CB.		Y	-	L
Ancoats North D Busbar	Y	-	L	6.6	Cannon St	Check Open Ancoats North CD Bus Section CB . Open Cannon St AB Bus Section CB &/OR F845 CB and BC Bus Section CB as appropriate.		Y	H	L
					Dickinson St (Sect E or F)	Check Open Ancoats North CD Bus Section CB. Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Piccadilly	Check Open Ancoats North CD Bus Section CB. Open Piccadilly AB Bus Section CB		Y	H	F
					Strangeways	Check Open Ancoats North CD Bus Section CB. Open Strangeways AB Bus Section CB & F762 OR F1848 CB		Y	-	L
Ardwick	Y	-	F	6.6	Dickinson St (Sect G)	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Central Manchester	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Open Central Manchester AB Bus Section CB.		Y	-	L
					Circle Sq	Open Ardwick AB Bus Section CB & F3810 CB. Open Circle Square T11 or T12 CB.		Y	-	L
					Fallowfield	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Open Fallowfield AB Bus Section CB.		Y	H	L
					Longsight	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Open Longsight AB Bus Section CB.		Y	H	L
					Moss Side	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Open Moss Side AB Bus Section CB & F99 CB..		Y	H	L
					Victoria Park	Open Ardwick AB Bus Section CB & F3810 CB OR Open T11 or T12 CB. Open Victoria Park and MJH Intake AB Bus Section CB's		Y	-	L
Ashton on Mersey	Y	-	L	6.6	Broadheath	Open AB Bus Section at both Primaries.		Y	H	L
					NWGB Partington	Open AB Bus Section at both Primaries.		Y	-	F
					Sale	Open AB Bus Section at both Primaries.		Y	H	L
					Sale Moor	No Action.		Y	-	L
Ashton U Lyne (Peak)	Y	-	L	6.6	Failsforth	Check Open Ashton U Lyne BC Bus Section CB. Open Failsforth AB Bus Section CB.		Y	H	L
					Snipe	Check Open Ashton U Lyne BC Bus Section CB. Open Ashton U Lyne AB Bus Section CB.		Y	-	L
Baguley	Y	-	L	11	Benchill	Open Baguley AB Bus Section CB.		Y	-	F
					Broadheath	Open AB Bus Section at both Primaries.		Y	H	L
					Green Ln	Open AB Bus Section at both Primaries.		Y	-	L
					Manchester Airport	Open Baguley AB Bus Section CB. Open Manchester Airport T11 or T12 CB.		Y	-	L
					Medipark	Open AB Bus Section at both Primaries. NOTE: Undertake Parallel after 0000hrs and before 0600hrs. Weekdays and Weekends.		Y	-	L
					Moss Nook	Open Baguley AB Bus Section CB.		Y	H	L
					Northenden	Open Baguley AB Bus Section CB, Open Northenden AB Bus Section CB.		Y	H	L
					Woodhouse Park	Open AB Bus Section at both Primaries.		Y	-	L
Barton Dock Rd	Y	-	L	6.6	Longford Bridge	Open AB Bus Section at both Primaries. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
					Mosley Rd	Open AB Bus Section at both Primaries. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
					Sale	Open AB Bus Section at both Primaries.		Y	-	L
					Trafford	Open AB Bus Section at Barton Dock Rd CB. Open Trafford AB Bus Section CB and F3722 CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
					Urmston	Open Barton Dock Rd AB Bus Section CB. Open Urmston T11 or T12 CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
Benchill	Y	-	F	6.6	Baguley	See Baguley		Y	-	L
					Gatley	No Action Required.		Y	H	F
					Moss Nook	No Action Required.		Y	-	L
					Northenden	Open Northenden AB Bus Section CB.		Y	H	L
					Woodhouse Park	Open Woodhouse Park AB Bus Section CB		Y	-	L

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Blackfriars	Y	-	L	6.6	Cannon St	Open Blackfriars AB Bus Section & F3795 CB. Open Cannon St AB Bus Section CB & /OR F845 and BC Bus Section CB as appropriate.		Y	H	L
					Chapel Wharf	Open Blackfriars AB Bus Section & F3795 CB. Open Chapel Wharf AB Bus Section CB.		Y	-	L
					Frederick Rd	Open Blackfriars AB Bus Section & F3795 CB. Open Frederick Rd AB Bus Section CB.		Y	-	L
					Pendleton	Open Blackfriars AB Bus Section & F3795 CB. Open Pendleton AB Bus Section & F2166 CB.		Y	H	L
					St Johns	Open Blackfriars AB Bus Section and F3795 CB. Open St Johns AB Bus Section CB.		Y	-	L
					Strangeways	Open Blackfriars AB Bus Section & F3795 CB. Open Strangeways AB Bus Section CB & F762 OR F1848 CB.		Y	-	L
					Trinity	Open Blackfriars AB Bus Section and F3795 CB. Open Trinity AB Bus Section CB and F3830 OR F3831 CB.		Y	-	L
Blackley	Y	H	L	6.6	Cheetham Hill	Open Blackley T11 or T12 CB. Open Cheetham Hill AB Bus Section CB.		Y	-	L
					Harpurhey	Open Blackley T11 or T12 CB. Open Harpurhey AB Bus Section CB.		Y	-	L
					Prestwich	Open Blackley T11 or T12 CB. Open Prestwich AB Bus Section CB.		Y	H	L
					Queens Park	Open Blackley T11 or T12 CB. Open Queens Park AB Bus Section CB.		Y	H	L
					Strangeways	Open Blackley T11 or T12 CB. Open Strangeways AB Bus Section CB and F762 OR F1848 CB.		Y	-	L
Bowdon	Y	H	L	11	Broadheath	Open Broadheath AB Bus Section CB.		Y	H	L
					Green Ln	Open AB Bus Section at both Primaries.		Y	-	L
Bradford A,B Busbars	Y	H	L	6.6	Ancoats	See Ancoats		Y	H	L
					Eastlands	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Eastlands F3615 or F3616 CB & AB Bus Section CB.		Y	-	L
					Longsight	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Longsight AB Bus Section CB.		Y	H	L
					Openshaw	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Openshaw AB Bus Section CB. Constrain generation via CSD at Rear MCR College Gen S/S 179471 (If parallel is from Bradford Sect A no requirement to shed generation).		Y	-	L
Bradford C Busbar	Y	H	L	6.6	Ancoats	See Ancoats		Y	H	L
					Denton West	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Denton West AB Bus Section CB.		Y	H	L
					Openshaw	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Openshaw AB Bus Section CB. Constrain generation via CSD at Rear MCR College Gen S/S 179471		Y	-	L
					Stuart St	Open Bradford BC Bus Section CB, F106 & F2 CB'S. Open Stuart St AB Bus Section CB.		Y	-	L
Broadheath	Y	H	L	11	Ashton on Mersey	See Ashton on Mersey		Y	-	L
					Baguley	See Baguley		Y	-	L
					Bowdon	See Bowdon		Y	H	L
					Green Ln	Open Broadheath AB Bus Section CB.		Y	-	L
Bridgewater	Y	-	L	6.6	Deansgate	Open Bridgewater AB Bus Section CB. Open Deansgate AB Bus Section CB and F242 CB.		Y	-	L
					Dickinson St (Sect E or F)	Open Bridgewater AB Bus Section CB. Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Dickinson St (Sect G)	Open Bridgewater AB Bus Section CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Knott Mill	Open AB Bus Section at both Primaries.		Y	H	L
					Moss Side	Open AB Bus Section at both Primaries.		Y	H	L
					Piccadilly	Open AB Bus Section at both Primaries.		Y	H	F
					St Johns	Open AB Bus Section at both Primaries.		Y	H	L
Cannon St (A,B and C Busbars)	Y	H	L	6.6	Ancoats	See Ancoats		Y	H	L
					Blackfriars	See Blackfriars		Y	-	L
					Deansgate	Open Cannon St AB Bus Section & /OR F845 and BC Bus Section CB as appropriate. Open Deansgate AB Bus Section and F242 CB's.		Y	-	L
					Piccadilly	Open Cannon St AB Bus Section & /OR F845 and BC Bus Section CB as appropriate. Open Piccadilly AB Bus Section CB.		Y	H	F
					Strangeways	Open Cannon St AB Bus Section & /OR F845 and BC Bus Section CB as appropriate. Open Strangeways AB Bus Section and F762 OR F1848 CB's.		Y	-	L
Central Manchester	Y	-	L	6.6	Ardwick	See Ardwick		Y	-	F
					Circle Sq	Open Central Manchester AB Bus Section CB. Open Circle Square T11 or T12 CB.		Y	-	L
					Dickinson St Sect G	Open Central Manchester AB Bus Section CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Dickinson St Sect E or F	Open Central Manchester AB Bus Section CB. Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Piccadilly	Open AB Bus Section at both Primaries		Y	H	F
Chapel Wharf	Y	-	L	6.6	Stuart St	Open Central Manchester AB Bus Section CB. Open Stuart St AB Bus Section CB.		Y	-	L
					Blackfriars	See Blackfriars		Y	-	L
					Strangeways	Open Chapel Wharf AB Bus Section CB. Open Strangeways AB Bus Section CB and F762 CB		Y	-	L
					St Johns	Open AB Bus Section at both Primaries.		Y	-	L
					Trinity	Open Chapel Wharf T11 CB. Open Trinity AB Bus Section, T13 CB and F3830 OR F3831 CB's		Y	-	L

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Chassen Road	Y	-	L	6.6	Irlam	Open AB Bus Section at both Primaries.		Y	-	L
					NWGB Partington	Open Chassen Rd AB Bus Section CB. Open NWGB Partington T11 OR T12 CB.		Y	H	F
					Urmston	Open Chassen Rd AB Bus Section CB. Open Urmston T11 OR T12 CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
Cheadle Hulme	Y	H	L	11	Gatley	No Action Required.		Y	H	F
					Handforth	No Action Required.		N	H	L
					Higher Mill	Open Higher Mill AB Bus Section CB.		Y	-	L
					Moss Nook	No Action.		Y	-	L
Cheetham Hill	Y	-	L	6.6	Blackley	See Blackley		Y	H	L
					Frederick Rd	Open AB Bus Section at both Primaries.		Y	H	L
					Harpurhey	Open AB Bus Section at both Primaries.		Y	-	L
					Prestwich	Open AB Bus Section at both Primaries.		Y	H	L
					Pendleton	Open Cheetham Hill AB Bus Section CB. Open Pendleton AB Bus Section & F2166 CB.		Y	H	L
					Queens Park	Open Cheetham Hill AB Bus Section CB. Open Queens Park AB Bus Section CB.		Y	H	L
					Strangeways	Open Cheetham Hill AB Bus Section CB. Open Strangeways AB Bus Section CB and F762 CB.		Y	-	L
Chester Road A,B Busbars	Y	-	L	6.6	Knott Mill	Check Open B-C Bus Section CB, Open F4575 CB at Chester Rd. Open AB Bus Section at both Primaries.		Y	H	F
					Longford Bridge	Check Open B-C Bus Section CB, Open F4575 CB at Chester Rd. Open AB Bus Section at both Primaries.		Y	-	L
					Moss Side	Check Open B-C Bus Section CB at Chester Rd. Open Chester Rd AB Bus Section CB and F4575 CB. Open Moss Side AB Bus Section CB and F99 CB.		N	H	L
					Trafford	Check Open B-C Bus Section CB at Chester Rd. Open Chester Rd AB Bus Section CB and F4575 CB. Open Trafford AB Bus Section CB and F3722 CB.		Y	-	L
Chester Road C Busbar	Y	-	L	6.6	Knott Mill	Check Open B-C Bus Section CB at Chester Rd. Open AB Bus Section at Knott Mill		Y	H	F
					Longford Bridge	Check Open B-C Bus Section CB at Chester Rd. Open AB Bus Section at Longford Bridge.		Y	-	L
					Moss Side	Check Open B-C Bus Section CB at Chester Rd. Open Moss Side AB Bus Section CB and F99 CB.		N	H	L
Chorlton	Y	H	F	6.6	Longford Bridge	Open Longford Bridge AB Bus Section CB.		Y	-	L
					Moss Side	Open Moss Side AB Bus Section CB and F99 CB		Y	H	L
					West Didsbury	Open West Didsbury AB Bus Section CB		Y	-	L
					Whalley Range	Open Whalley Range AB Bus Section CB.		Y	-	L
					Withington	Open Withington AB Bus Section CB		Y	-	L
Circle Sq	Y	-	L	6.6	Ardwick	See Ardwick		Y	-	F
					Dickinson St (Sect G)	Open Circle Square T11 or T12 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Dickinson St (Sect E or F)	Open Circle Square T11 or T12 CB. Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Central Manchester	See Central Manchester		Y	-	L
Deansgate	Y	-	L	6.6	Bridgewater	See Bridgewater		Y	-	L
					Cannon St	See Cannon St		Y	H	L
					Dickinson St (Sect E or F)	Open Deansgate AB Bus Section CB and F242 CB. Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close.		Y	-	L
					Knott Mill	Open Knott Mill AB Bus Section CB. Open Deansgate AB Bus Section CB and F242 CB.		Y	H	L
					Piccadilly	Open Piccadilly AB Bus Section CB. Open Deansgate AB Bus Section CB and F242 CB.		Y	H	F
					Strangeways	Open Strangeways AB Bus Section CB and F762 OR F1848 CB. Open Deansgate AB Bus Section CB and F242 CB.		Y	-	L
					Trinity	Open Trinity AB Bus Section CB, T13 CB and F3830 OR F3831 CB's. Open Deansgate AB Bus Section CB and F242 CB.		Y	-	L
Denton East	Y	-	L	6.6	Denton West	Open AB Bus Section at both Primaries.		Y	H	L
					Droylsden East	Open AB Bus Section at both Primaries.		Y	-	L
					Openshaw	Open AB Bus Section at both Primaries.		Y	-	L
					Snipe	Open AB Bus Section at both Primaries.		Y	-	L
Denton West	Y	H	L	6.6	Bradford	See Bradford		Y	H	L
					Denton East	See Denton East		Y	-	L
					Droylsden East	Open AB Bus Section at both Primaries.		Y	-	L
					Longsight	Open AB Bus Section at both Primaries.		Y	H	L
					Openshaw	Open AB Bus Section at both Primaries.		Y	-	L
					Snipe	Open AB Bus Section at both Primaries.		Y	-	L

Primary Substation (A)	Tap Change Control ? H = Hand Chg Spring Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ? H = Hand Chg Spring Leave / Fix taps ?				
Dickinson St E,F Busbars	Y	-	L	6.6	Ancoats	See Ancoats	Y	H	L	
					Bridgewater	See Bridgewater	Y	-	L	
					Central Manchester	See Central Manchester	Y	-	L	
					Circle Sq	See Circle Sq	Y	-	L	
					Deansgate	See Deansgate	Y	-	L	
					Piccadilly	Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close. Open Piccadilly AB Bus Section CB.	Y	H	F	
					Victoria Park	Open Dickinson St EF Bus Section CB & F1022 or F1024 CB. Check Open Dickinson St FG Bus Section CB & disable auto close. Open Victoria Park and MJH Intake AB Bus Section CB's	Y	-	L	
Dickinson St Busbar	G	Y	-	L	6.6	Ardwick	See Ardwick	Y	-	F
						Bridgewater	See Bridgewater	Y	-	L
						Eastlands	Check Open Dickinson St FG Bus Section CB & disable auto close. Open Eastlands F3615 or F3616 CB & AB Bus Section CB.	Y	-	L
						Central Manchester	See Central Manchester	Y	-	L
						Circle Sq	See Circle Sq	Y	-	L
						Knott Mill	Open Stuart St G3 33kV CB. Check Open Dickinson St FG Bus Section CB & disable auto close. Open Knott Mill AB Bus Section CB.	Y	H	L
						Manchester University	Check Open Dickinson St FG Bus Section CB & disable auto close. Open Manchester University AB Bus Section CB.	Y	H	L
						Piccadilly	Check Open Dickinson St FG Bus Section CB & disable auto close. Open Piccadilly AB Bus Section CB.	Y	H	F
						Open Dickinson St F1022 or F1024 6.6kV CB, Open E-F Bus Section 6.6kV CB. Disable Auto Close and Close FG Bus Section 6.6kV CB				
Didsbury	Y	-	F	6.6	Gatley	Open AB Bus Section at both Primaries	Y	H	F	
					Heaton Moor (Peak)	Open AB Bus Section at both Primaries	N	-	L	
					Heaton Norris (Peak)	Open AB Bus Section at both Primaries	N	H	L	
					Higher Mill	Open AB Bus Section at both Primaries.	Y	-	L	
					Levenshulme	Open AB Bus Section at both Primaries.	Y	-	L	
					West Didsbury	Open AB Bus Section at both Primaries	Y	-	L	
					Withington	Open AB Bus Section at both Primaries	Y	-	L	
Droylsden East	Y	-	L	6.6	Denton East	See Denton East	Y	-	L	
					Denton West	See Denton West	Y	H	L	
					Openshaw	Open AB Bus Section at both Primaries.	Y	-	L	
					Snipe	Open AB Bus Section at both Primaries.	Y	-	L	
					Stuart St	Open Droylsden East AB Bus Section CB. Open Stuart St AB Bus Section CB and F350 OR F80 CB.	Y	-	L	
Eastlands	Y	-	L	6.6	Ancoats	See Ancoats	Y	H	L	
					Bradford	See Bradford	Y	H	L	
					Dickinson St	See Dickinson St	Y	-	L	
					Queens Park	Open Eastlands F3615 or F3616 CB & AB Bus Section CB. Open Queens Park AB Bus Section CB.	Y	H	L	
					Stuart St	Open Eastlands F3615 or F3616 CB & AB Bus Section CB. Open Stuart St AB Bus Section CB.	Y	-	L	
Failsworth	Y	H	L	6.6	Ashton U Lyne (Peak)	See Ashton U Lyne (Peak)	Y	-	L	
					Harpurhey	Open AB Bus Section at both Primaries.	Y	-	F	
					New Moston	Open AB Bus Section at both Primaries.	Y	-	L	
					Newton Heath	Open Failsworth AB Bus Section CB.	Y	-	F	
Fallowfield	Y	H	L	6.6	Ardwick	See Ardwick	Y	-	F	
					Levenshulme	Open AB Bus Section CB at both Primaries	Y	H	F	
					Longsight	Open AB Bus Section CB at both Primaries	Y	H	L	
					Moss Side	Open Fallowfield AB Bus Section CB. Open Moss Side AB Bus Section CB and F99 CB	Y	H	L	
					Victoria Park	Open Fallowfield AB Bus Section CB. Open Victoria Park and MJH Intake AB Bus Section CB's	Y	-	L	
					Whalley Range	Open AB Bus Section CB at both Primaries	Y	-	L	
					Withington	Open AB Bus Section CB at both Primaries	Y	-	L	
					West Didsbury	Open AB Bus Section CB at both Primaries	Y	-	L	
Frederick Road	Y	H	L	6.6	Blackfriars	See Blackfriars	Y	-	L	
					Cheetham Hill	See Cheetham Hill	Y	-	L	
					Pendleton	Open Frederick Rd AB Bus Section CB. Open Pendleton AB Bus Section CB and F2166 CB	Y	H	L	
					Prestwich	Open AB Bus Section at both Primaries.	Y	H	L	
					Robert Hall St	Open AB Bus Section at both Primaries.	Y	H	L	
					Salford Quay	Open Frederick Rd AB Bus Section CB. Disable Salford Quays Auto Trip Scheme and Open T11 OR T12 CB	Y	-	L	
					Strangeways	Open Frederick Rd AB Bus Section CB. Open Strangeways AB Bus Section CB and F762 OR F1848 CB	Y	-	L	
					The Height	Open AB Bus Section at both Primaries	Y	H	L	
					Trinity	Open Frederick Rd AB Bus Section CB. Open Trinity AB Bus Section CB, T13 CB and F3830 OR F3831 CB's	Y	-	L	
Gatley	Y	H	L	6.6	Benchill	See Benchill	Y	-	F	
					Cheadle Hulme	See Cheadle Hulme	Y	H	L	
					Didsbury	See Didsbury	Y	-	F	
					Higher Mill	Open Higher Mill AB Bus Section CB.	Y	-	L	
					Moss Nook	No Action	Y	-	L	
					Northenden	Open Northenden AB Bus Section CB.	Y	H	L	
					Woodhouse Park	Open Woodhouse Park AB Bus Section CB.	Y	-	L	
Green Ln	Y	-	L	11	Baguley	See Baguley	Y	-	L	
					Bowdon	See Bowdon	Y	H	L	
					Broadheath	See Broadheath	Y	H	L	

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Handforth (Peak)	N	H	L	11	Cheadle Hulme	See Cheadle Hulme		Y	H	L
					Manchester Airport	Open Manchester Airport T11 OR T12 CB.		Y	-	L
					Moss Nook	Open Handforth AB Bus section CB and Bulkeley Rd No.1 CB. Field Engineer to contact Mathews Fm CHP Generation Control Room tel: No 0121-712-1970 optn 2 then optn 4. or Jason Harris (Ops Supervisor) 07720 683856 to agree time of non generation to make parallel.(If possible this should be requested 24hrs in advance) DSMC to confirm less than 15Amps on Mathew Farm CHP Generation feeder at Moss Nook Pry via NMS prior to parallel.		Y	-	L
Harpurhey	Y	-	L	6.6	Blackley	See Blackley		Y	H	L
					Cheetham Hill	See Cheetham Hill		Y	-	L
					Fallsworth	See Fallsworth		Y	H	L
					Monsall	Open Monsall AB Bus Section and F4664 CB. Open Harpurhey AB Bus Section CB.		Y	-	F
					New Moston	Open AB Bus Section CB at both Primaries		Y	-	F
					Queens Park	Open Harpurhey AB Bus Section CB. Open Queens Park AB Bus Section CB		Y	H	L
Heaton Moor (Peak)	N	-	L	6.6	Didsbury	See Didsbury		Y	-	F
					Levenshulme	Open AB Bus Section CB at both Primaries.		Y	-	L
Heaton Norris (Peak)	N	H	L	6.6	Didsbury	See Didsbury		Y	-	F
					Levenshulme	Open Levenshulme AB Bus Section CB. Open Heaton Norris AB Bus Section CB and UB Brands No.3 CB.		Y	-	L
Higher Mill	Y	-	L	6.6	Cheadle Hulme	See Cheadle Hulme		Y	H	L
					Didsbury	See Didsbury		Y	-	F
					Gatley	See Gatley		Y	H	L
					Northenden	Open Higher Mill AB Bus Section CB, Open Northenden AB Bus Section CB.		Y	H	L
Irlam	Y	-	L	6.6	Chassen Rd	See Chassen Rd		Y	-	L
					Monton	Open Irlam AB Bus Section CB. Open Monton T11 OR T12 CB.		Y	-	L
					Mount St	Open AB Bus Section at both Primaries.		Y	H	L
					NWGB Partington	Open Irlam AB Bus Section CB. Open NWGB Partington T11 OR T12 CB.		Y	H	F
					Urmston	Open Urmston T11 OR T12 CB. Open Irlam AB Bus Section CB.		Y	H	L
Knott Mill	Y	H	L	6.6	Bridgewater	See Bridgewater		Y	-	L
					Deansgate	See Deansgate		Y	-	L
					Dickinson St	See Dickinson St		Y	-	L
					Manchester University	Open AB Bus Section CB at both Primaries.		Y	H	L
					Moss Side	Open Knott Mill AB Bus Section CB. Open Moss Side AB Bus Section CB and F99 CB.		Y	H	L
					St Johns	Open Knott Mill AB Bus Section CB. Open St Johns AB Bus Section CB		Y	-	L
					Trafford	Open Knott Mill AB Bus Section CB. Open Trafford AB Bus Section CB and F3722 CB.		Y	-	L
					Trinity	Open Knott Mill AB Bus Section CB. Open Trinity AB Bus Section CB, T13 CB and F3830 OR F3831 CB's		Y	-	L
Levenshulme	Y	-	L	6.6	Didsbury	See Didsbury		Y	-	F
					Fallowfield	See Fallowfield		Y	H	L
					Heaton Moor	See Heaton Moor		N	-	L
					Heaton Norris	See Heaton Norris		N	H	L
					Longsight	Open AB Bus Section CB at both Primaries.		Y	H	L
					Withington	Open AB Bus Section CB at both Primaries.		Y	-	L
Longford Bridge	Y	-	L	6.6	Barton Dock Rd	See Barton Dock Rd.		Y	-	L
					Chester Rd	See Chester Rd		Y	-	L
					Chorlton	See Chorlton		Y	H	F
					Moss Side	Open Longford Bridge AB Bus Section CB. Open Moss Side AB Bus Section CB and F99 CB		Y	H	L
					Sale	Open AB Bus Section CB at both Primaries.		Y	-	L
					Trafford	Open Longford Bridge AB Bus Section CB. Open Trafford AB Bus Section CB and F3722 CB.		Y	-	L
					Urmston	Open Longford Bridge AB Bus Section CB. Open Urmston T11 OR T12 CB.		Y	-	L
					Whalley Range	Open AB Bus Section CB at both Primaries.		Y	-	L
Longsight	Y	H	L	6.6	Ardwick	See Ardwick		Y	-	F
					Bradford	See Bradford		Y	H	L
					Denton West	See Denton West		Y	H	L
					Fallowfield	See Fallowfield		Y	H	L
					Levenshulme	See Levenshulme		Y	-	L
					Moss Side	Open Longsight AB Bus Section Cb. Open Moss Side AB Bus Section CB and F99 CB.		Y	H	L
					Openshaw	Open AB Bus Section CB at both Primaries.		Y	-	L
					Victoria Park	Open Longsight AB Bus Section CB. Open Victoria Park and MJH Intake AB Bus Section CB's		Y	-	L
					West Didsbury	Open AB Bus Section CB at both Primaries.		Y	-	L
					Withington	Open AB Bus Section CB at both Primaries.		Y	-	L
Lyons Road	Y	H	F	6.6	Mosley Rd	Open Lyons Road AB Bus Section CB. Open Mosley Rd AB Bus Section CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L
					Trafford Park North	Open Lyons Road AB Bus Section CB. Open Trafford Park T11 OR T12 CB.		Y	-	F
					Urmston	Open Lyons Road AB Bus Section CB. Open Urmston T11 OR T12 CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers.		Y	-	L

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Manchester Airport	Y	-	L	6.6	Baguley	See Baguley		Y	-	L
					Handforth (Peak)	See Handforth		N	H	L
					Moss Nook	Open Manchester Airport T11 OR T12 CB.		Y	-	L
					Thorley Ln	Open Manchester Airport T11 OR T12 CB. Open Thorley Ln T11 OR T12 CB.		Y	-	L
					Woodhouse Park	Open Woodhouse Park AB Bus Section CB. Open Manchester Airport T11 OR T12 CB		Y	-	L
Manchester University	Y	H	L	6.6	Knott Mill	See Knott Mill		Y	H	L
					Dickinson St	See Dickinson St		Y	-	L
					Victoria Park	Open Manchester University AB Bus Section CB. Open Victoria Park and MJH Intake AB Bus Section CB's		Y	H	L
Medipark	Y	-	L	11	Baguley	See Baguley		Y	-	L
Monsall	Y	-	L	6.6	Harpurhey	See Harpurhey		Y	-	L
					Newton Heath	Open Monsall AB Bus Section CB and F4664 CB. Open Stewart ST Grid GT3 33kV CB.		Y	-	F
					Queens Park	Open Monsall AB Bus Section CB and F4664 CB. Open Queens Park AB Bus Section CB		Y	H	L
					Stuart St	Open AB Bus Section CB at both Primaries.		Y	-	L
Monton	Y	-	L	6.6	Irlam	See Irlam		Y	-	L
					Mount St	Open Monton T11 OR T12 CB. Open Mount St AB Bus Section CB.		Y	H	L
					Weaste	Open Monton T11 OR T12 CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
Mosley Road	Y	-	L	6.6	Barton Dock Rd	See Barton Dock Rd		Y	-	L
					Lyons Rd	See Lyons Rd		Y	H	F
					Trafford	Open Mosley Road AB Bus Section. Open Trafford AB Bus Section CB and F3722 CB.		Y	-	L
					Trafford Park North	Open Mosley Road AB Bus Section CB. Open Trafford Park T11 OR T12 CB. Request Open of Barton Grid GT3 33kV CB (OP91 Applies). Use 2x Switchers. NOTE: Undertake Parallel before 0700hrs or after 1830hrs Weekdays. Alternatively Weekends.		Y	-	F
Moss Nook	Y	H	L	11	Baguley	See Baguley		Y	-	L
					Benchill	See Benchill		Y	-	F
					Cheadle Hulme	See Cheadle Hulme		Y	H	L
					Gatley	See Gatley		Y	H	L
					Handforth (Peak)	See Handforth		N	H	L
					Manchester Airport	See Manchester Airport		Y	-	L
					Thorley Ln	Offload a GT at Moss Nook Grid (transmission staff required for tap control), Constrain generator at Matthews Fm CHP Generation (177424), Open Thorley Ln AB Bus Section 11kV CB.		Y	-	L
					Wilmslow (Peak)	No Action Required.		N	-	L
					Woodhouse Park	No Action Required.		Y	-	L
Moss Side	Y	H	L	6.6	Ardwick	See Ardwick		Y	-	F
					Bridgewater	See Bridgewater		Y	-	L
					Chester Rd	See Chester Rd		Y	-	L
					Chorlton	See Chorlton		Y	H	F
					Fallowfield	See Fallowfield		Y	H	L
					Knott Mill	See Knott Mill		Y	H	L
					Longford Bridge	See Longford Bridge		Y	-	L
					Longsight	See Longsight		Y	H	L
					Victoria Park	Open Moss Side AB Bus Section CB and F99 CB. Open Victoria Park and MJH Intake AB Bus Section CB's		Y	-	L
					Whalley Range	Open Moss Side AB Bus Section CB and F99 CB. Open Whalley Range AB Bus Section CB.		Y	-	L
					Withington	Open Moss Side AB Bus Section CB and F99 CB. Open Withington AB Bus Section CB.		Y	-	L
Mount St	Y	H	L	6.6	Irlam	See Irlam		Y	-	L
					Monton	See Monton		Y	-	L
					Weaste Section A Bars	Open Mount St T11 OR T12 6.6kV CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
					Weaste Section B Bars	Open Mount St T11 OR T12 6.6kV CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
New Moston	Y	-	L	6.6	Failsworth	See Failsworth		Y	H	L
					Harpurhey	See Harpurhey		Y	-	L
					Newton Heath	Open New Moston AB Bus Section CB		Y	-	F
Newton Heath	Y	-	F	6.6	Failsworth	See Failsworth		Y	H	L
					Monsall	See Monsall		Y	-	L
					New Moston	See New Moston		Y	-	L
					Queens Park	Open Queens Park AB Bus Section CB		Y	H	L
Northenden	Y	H	L	6.6	Stuart St	Open Stuart St AB Bus Section CB.		Y	-	L
					Baguley	See Baguley		Y	-	L
					Benchill	See Benchill		Y	-	F
					Gatley	See Gatley		Y	H	L
					Higher Mill	See Higher Mill		Y	-	L
					West Didsbury	Open AB Bus Section CB at both Primaries.		Y	-	L
NWGB Partington	Y	-	F	6.6	Ashton on Mersey	See Ashton on Mersey		Y	-	L
					Chassen Rd	See Chassen Rd		Y	-	L
					Irlam	See Irlam		Y	H	L
Openshaw	Y	-	L	6.6	Bradford	See Bradford		Y	H	L
					Denton East	See Denton East		Y	-	L
					Denton West	See Denton West		Y	H	L
					Droylsden East	See Droylsden East		Y	-	L
					Longsight	See Longsight		Y	H	L
					Stuart St	Open Stuart St AB Bus Section CB. Open Openshaw AB Bus Section CB.		Y	-	L

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
Pendleton	Y	H	L	6.6	Blackfriars	See Blackfriars		Y	-	L
					Cheetham Hill	See Cheetham Hill		Y	-	F
					Frederick Rd	See Frederick Rd		Y	H	L
					Robert Hall St	Open Pendleton AB Bus Section & F2166 CB. Open Robert Hall AB Bus Section CB.		Y	H	L
					The Height	Open Pendleton AB Bus Section & F2166 CB. Open The Height AB Bus Section CB		Y	H	L
					Trinity	Open Pendleton AB Bus Section & F2166 CB. Open Trinity AB Bus Section CB, T13 CB and F3830 OR F3831 CB's		Y	-	L
Piccadilly	Y	H	F	6.6	Ancoats	See Ancoats		Y	H	L
					Bridgewater	See Bridgewater		Y	-	L
					Cannon St	See Cannon St		Y	H	L
					Central Manchester	See Central Manchester		Y	-	L
					Deansgate	See Deansgate		Y	-	L
					Dickinson St	See Dickinson St		Y	-	L
Prestwich	Y	H	L	6.6	Blackley	See Blackley		Y	H	L
					Cheetham Hill	See Cheetham Hill		Y	-	L
					Frederick Rd	See Frederick Rd		Y	H	L
					The Height	Open AB Bus Section at both Primaries.		Y	H	L
					Trinity	Open AB Bus Section at both Primaries.		Y	H	L
Queens Park A,B and C Busbars	Y	H	L	6.6	Ancoats	See Ancoats		Y	H	L
					Blackley	See Blackley		Y	H	L
					Cheetham Hill	See Cheetham Hill		Y	-	L
					Eastlands	See Eastlands		Y	-	L
					Harpurhey	See Harpurhey		Y	-	L
					Monsall	See Monsall		Y	-	L
					Newton Heath	See Newton Heath		Y	-	L
					Strangeways	Open Queens Park AB Bus Section CB. Open Strangeways AB Bus Section CB and F762 OR F1848 CB		Y	-	L
					Stuart St	Open Queens Park AB Bus Section CB. Open Stuart St AB Bus Section CB.		Y	-	L
					Trinity	Open Queens Park AB Bus Section CB. Open Trinity AB Bus Section CB.		Y	-	L
Robert Hall St	Y	H	L	6.6	Frederick Rd	See Frederick Rd		Y	H	L
					Pendleton	See Pendleton		Y	H	L
					Salford Quay	For Robert Hall St Section A Parallel: Open Robert Hall St AB Bus Section CB. At Salford Quays check no load on Broadway Back Up Supply F4442 and F4443 CB's. Disable Salford Quays Auto trip Scheme, Open AB Bus Section CB and F4442 OR F4443 CB. For Robert Hall St Section B OR C Parallels: Open Robert Hall St AB Bus Section CB. Disable Salford Quays Auto trip Scheme and Open T11 OR T12 CB.		Y	-	L
					Trinity	Open Robert Hall St AB Bus Section CB. Open Trinity AB Bus Section CB, T13 CB and F3830 OR F3831 CB's		Y	-	L
					Weaste	Open Robert Hall St AB Bus Section CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
					Worsley	Open Robert Hall St AB Bus Section CB. Open Worsley F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
Sale	Y	-	L	6.6	Ashton on Mersey	See Ashton on Mersey		Y	-	L
					Barton Dock Rd	See Barton Dock Rd		Y	-	L
					Longford Bridge	See Longford Bridge.		Y	-	L
					Sale Moor	Open Sale AB Bus Section CB.		Y	-	F
Sale Moor	Y	-	F	6.6	Ashton on Mersey	See Ashton on Mersey		Y	-	L
					Sale	See Sale		Y	-	L
Salford Quays	Y	-	L	6.6	Frederick Rd	See Frederick Rd		Y	H	L
					Robert Hall St	See Robert Hall St		Y	H	L
					Weaste	Disable Salford Quays Auto trip Scheme and Open T11 OR T12 CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
					Worsley	Open Salford Quays AB Bus Section CB. Open Worsley F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
Snipe	Y	-	L	6.6	Ashton U Lyne (Peak)	See Ashton U Lyne (Peak)		Y	-	L
					Denton East	See Denton East		Y	-	L
					Denton West	See Denton West		Y	H	L
					Droylsden East	See Droylsden East		Y	-	L
St Johns	Y	-	L	6.6	Blackfriars	See Blackfriars		Y	-	L
					Bridgewater	See Bridgewater		Y	-	L
					Chapel Wharf	See Chapel Wharf		Y	-	L
					Knott Mill	See Knott Mill		Y	H	L
					Trinity	Open Trinity F3830 or F3831, AB Bus Section and T13 CB. Open St Johns AB Bus Section CB.		Y	-	L
					Worsley	Open St Johns AB Bus Section CB. Open Worsley F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
Strangeways	Y	-	L	6.6	Ancoats	See Ancoats		Y	H	L
					Blackfriars	See Blackfriars		Y	-	F
					Blackley	See Blackley		Y	H	L
					Cannon St	See Cannon St		Y	H	L
					Chapel Wharf	See Chapel Wharf		Y	-	L
					Cheetham Hill	See Cheetham Hill		Y	-	L
					Deansgate	See Deansgate		Y	-	L
					Frederick Rd	See Frederick Rd		Y	H	L
					Queens Park	See Queens Park		Y	H	L
					Trinity	Open Queens Park AB Bus Section CB. Open Trinity AB Bus Section CB.		Y	-	L
Stuart St	Y	-	L	6.6	Ancoats	See Ancoats		Y	H	L
					Bradford	See Bradford		Y	H	L
					Central Manchester	See Central Manchester		Y	-	L
					Eastlands	See Eastlands		Y	-	L
					Monsall	See Monsall		Y	-	L
					Newton Heath	See Newton Heath		Y	-	F
					Openshaw	See Openshaw		Y	-	L
					Queens Park	See Queens Park		Y	H	L

Primary Substation (A)	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?	kV	Parallel with	Action required to reduce fault level / circulating current. Where switching operations require the opening of Primary Transformer CB Tap Change Schemes shall be made Non-Auto. When opening Bus-Section CBs, then consideration shall be taken to make Tap Change Control Schemes Non-Auto.	Primary Substation B	Tap Change Control ?	H = Hand Chg Spring	Leave / Fix taps ?
The Height	Y	H	L	6.6	Frederick Rd	See Frederick Rd		Y	H	L
					Pendleton	See Pendleton		Y	H	L
					Prestwich	See Prestwich		Y	H	L
					Weaste	Open The Height AB Bus Section CB. Open Weaste F4488,F1292,F2847 and AB Bus Section CB.		Y	-	L
Thorley Ln	Y	-	L	11	Manchester Airport	See Manchester Airport		Y	H	L
					Moss Nook Pry	See Moss Nook Pry		Y	-	L
					Woodhouse Park	Open Woodhouse Park AB Bus Section CB. Open Thorley Ln T11 OR T12 CB		Y	H	L
Trafford	Y	-	L	6.6	Barton Dock Rd	See Barton Dock Rd		Y	-	L
					Chester Rd	See Chester Rd		Y	-	L
					Knott Mill	See Knott Mill		Y	H	L
					Longford Bridge	See Longford Bridge		Y	-	L
					Mosley Rd	See Mosley Rd		Y	-	L
Trafford Park North	Y	-	F	6.6	Lyons Rd	See Lyons Rd		Y	H	F
					Mosley Rd	See Mosley Rd		Y	-	L
Trinity	Y	-	L	6.6	Blackfriars	See Blackfriars		Y	-	L
					Chapel Wharf	See Chapel Wharf		Y	-	L
					Deansgate	See Deansgate		Y	-	L
					Frederick Rd	See Frederick Rd		Y	H	L
					Knott Mill	See Knott Mill		Y	H	L
					Pendleton	See Pendleton		Y	H	L
					Robert Hall St	See Robert Hall St		Y	H	L
					St Johns	See St Johns		Y	-	L
Urmston	Y	-	L	6.6	Barton Dock Rd	See Barton Dock Rd		Y	-	L
					Chassen Rd	See Chassen Rd		Y	-	L
					Irlam	See Irlam		Y	-	L
					Longford Bridge	See Longford Bridge		Y	-	L
					Lyons Rd	See Lyons Rd		Y	H	F
Victoria Park	Y	-	L	6.6	Ardwick	See Ardwick		Y	-	F
					Dickinson St	See Dickinson St		Y	-	L
					Fallowfield	See Fallowfield		Y	H	L
					Longsight	See Longsight		Y	H	L
					Manchester University	See Manchester University		Y	H	L
					Moss Side	See Moss Side		Y	H	L
Weaste	Y	-	L	6.6	Monton	See Monton		Y	-	F
					Mount St	See Mount St		Y	H	L
					Robert Hall St	See Robert Hall St		Y	H	L
					Salford Quay	See Salford Quay		Y	-	L
					The Height	See The Height		Y	H	L
West Didsbury	Y	-	L	6.6	Chorlton	See Chorlton		Y	H	F
					Didsbury	See Didsbury		Y	-	F
					Fallowfield	See Fallowfield		Y	H	F
					Longsight	See Longsight		Y	H	L
					Northenden	See Northenden		Y	H	L
					Whalley Range	Open AB Bus Section at both Primaries.		Y	-	L
					Withington	Open AB Bus Section at both Primaries		Y	-	L
Whalley Range	Y	-	L	6.6	Chorlton	See Chorlton		Y	H	F
					Fallowfield	See Fallowfield		Y	H	L
					Longford Bridge	See Longford Bridge		Y	-	L
					Moss Side	See Moss Side		Y	H	L
					West Didsbury	See West Didsbury		Y	-	L
					Withington	Open AB Bus Section at both Primaries.		Y	-	L
Wilmslow (Peak)	N	-	L	6.6	Moss Nook	See Moss Nook		Y	H	L
Withington	Y	-	L	6.6	Chorlton	See Chorlton		Y	H	F
					Didsbury	See Didsbury		Y	-	F
					Fallowfield	See Fallowfield		Y	H	L
					Levenshulme	See Levenshulme		Y	H	L
					Longsight	See Longsight		Y	H	L
					Moss Side	See Moss side		Y	H	L
					West Didsbury	See West Didsbury		Y	-	L
Woodhouse Park	Y	-	L	11	Whalley Range	See Whalley Range		Y	-	L
					Baguley	See Baguley		Y	-	L
					Benchill	See Benchill		Y	-	F
					Gatley	See Gatley		Y	-	L
					Manchester Airport	See Manchester Airport		Y	-	L
					Moss Nook	See Moss Nook		Y	-	L
					Thorley Ln	See Thorley Ln		Y	-	L